

Curtain Pole Instructions

A. Two part poles should be joined together by inserting the double-ended wood screw provided into the pre-drilled holes and twist the two poles firming together.

B. Push the finials onto the ends of the pole with a twisting action and offer the pole up to the window to determine whether the pole needs shortening. If you need to shorten a two-piece pole you must cut an equal amount from either end of each pole to ensure that the join remains exactly in the center. Obviously, in the case of a single piece pole, you only cut off from one side.

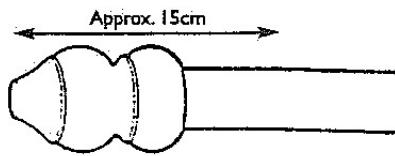


Fig.1

C. Mark the wall approximately 15 cms in from the end of each finial to indicate where the brackets should be fixed (Fig 1). For longer poles and poles supplied in two halves, a centre support bracket is supplied. Mark the wall exactly half way between the two end bracket.

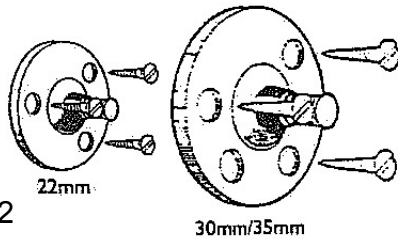


Fig. 2

D. Having determined the bracket positions, remove the base plate from the bag and fix them to the wall using raw wall plugs and screws provided. (Fig 2). It is recommended that initially one hole only should be drilled for each bracket. This allows for the final adjustments to ensure that the pole will be exactly level before drilling and fixing the remaining screws. On 35mm poles, the base plate has 3 hole positions

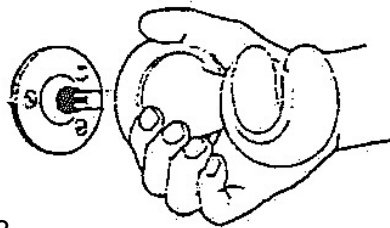


Fig. 3

5. Screw each bracket onto its base plate ensuring that the base of the bracket is gripped as shown, Do not twist from the cup end. (Fig 3).

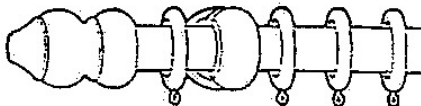


Fig. 4

E. Slide the rings onto the pole ensuring that one ring each end is between the finial and the bracket. (Fig 4). Place the pole in the brackets to centralise it using the fixing screws provided.

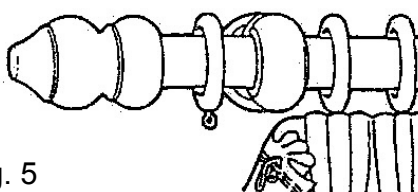


Fig. 5

F. The pole is now ready to accept the curtains by slipping curtain hooks through the eyelets on the rings. (Fig 5).